


PARTS CATALOG

POLAROID LAND CAMERA MODELS

100, 101, 102, 103, 104, 125, 135,
210, 215, 220, 225, 230, 240 & 250

JUNE 1, 1970

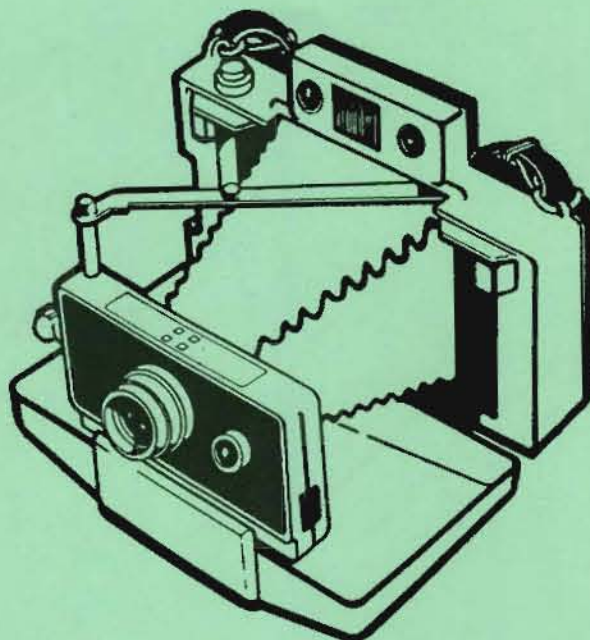

To Order Parts:

Give PART NUMBER, full PART NAME and QUANTITY desired.

Give exact shipping instructions and your complete shipping address.

Address all part orders to:

Polaroid Corporation
Camera Parts Department
89 Second Avenue
Waltham, Massachusetts 02154

Prices F.O.B. Waltham, Massachusetts.

Terms (to accredited accounts): Net 30 days.


Merchandise returns accepted only upon written authorization by Polaroid Corporation.

This price schedule supersedes all previous price schedules.

Prices are subject to change without notice.

POLAROID CORPORATION/PARTS DEPARTMENT/WALTHAM, MASSACHUSETTS

PICTORIAL INDEX & COMMON HARDWARE

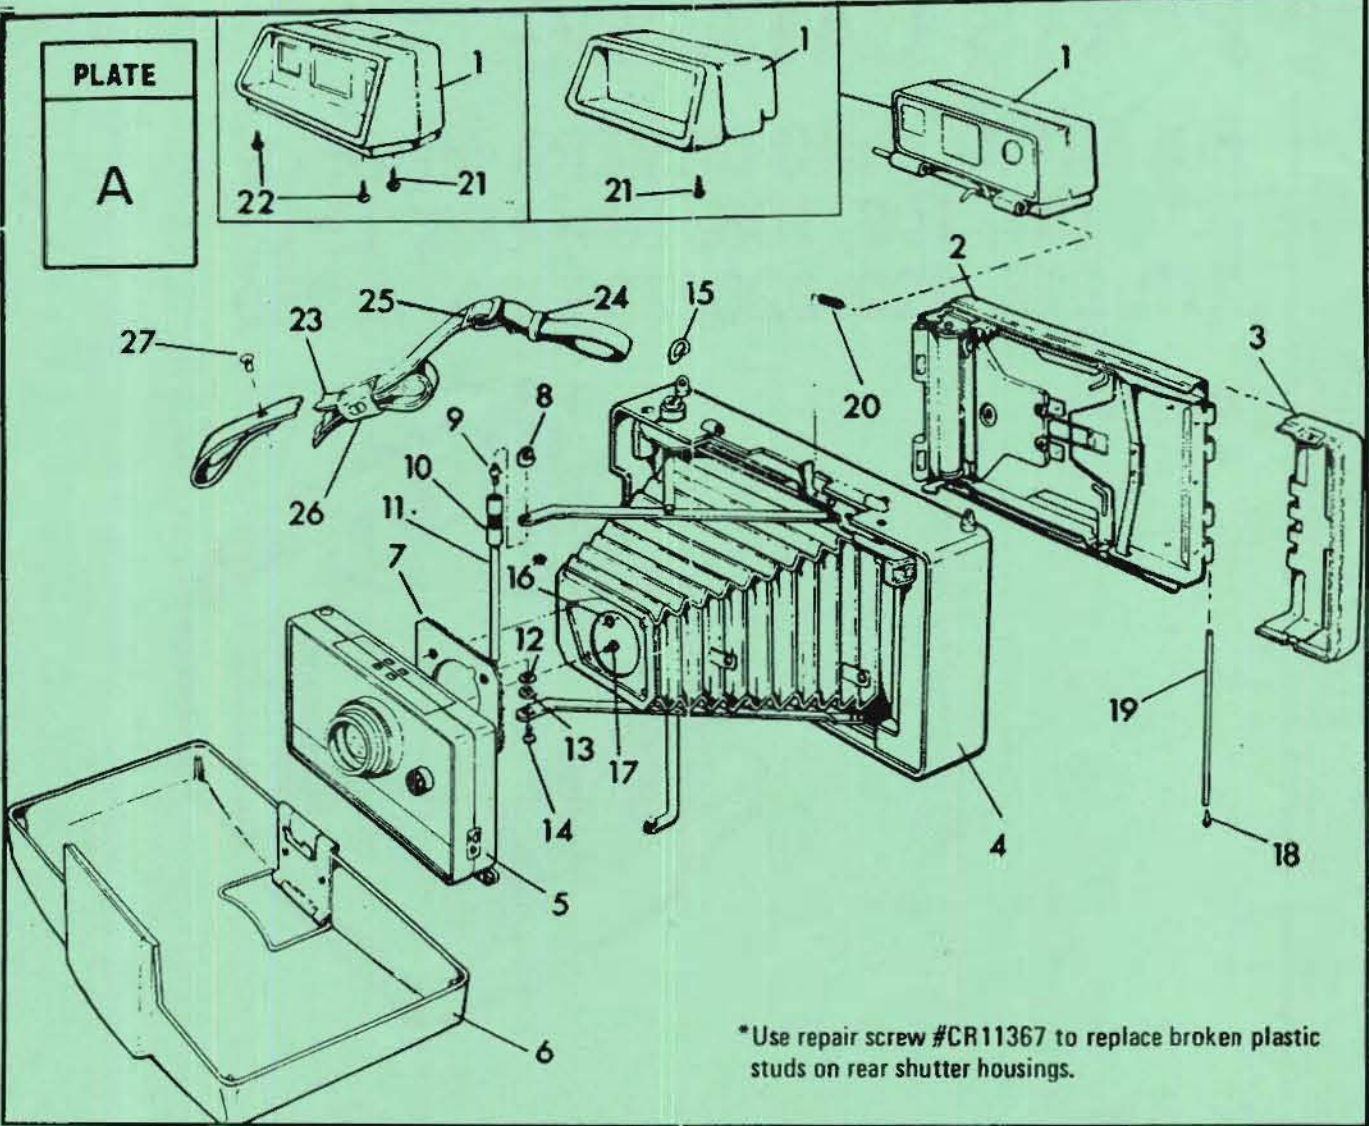

PICTORIAL INDEX

Key No.	Part Name	Plate
1	R.F.-V.F. Assembly	B & C
2	Rear Door Assembly	D
3	Rear Cover Assembly	D
4	Body Assembly/Bellows	E & F
5	Shutter Assembly	G & H
6	Front Cover Assembly	I

PARTS LIST A


COMMON HARDWARE

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100,101,102 240,250	Sugg. List Price	103,104,125,135,210 215,220,225,230	Sugg. List Price				
7	Bellows Front Frame Light Seal	179731	See Num List	179731	See Num List				
8	Detent	157949		157949					
9	Detent Stud	160473		168056					
10	Shutter Shaft Sleeve	168099		_____					
11	Shutter Shaft	168098		_____					
12	Flat Washer	160440		_____					
13	Bowed Washer	160442		_____					
14	Screw, Shutter Shaft	149570		168055					
15	'D' Ring (2)	160455		_____					
Key No.	Part Name	100,240,250	101,102,103,104,125,135 210,215,220,225,230		Sugg. List Price				
16	Fastener, Bellows (4)	_____	172331		See Num List				
17	Screw, Bellows (4)	220968	_____						
Key No.	Part Name	100,101,102 225,240,250	103,104,125,135 210,215,220,230		Sugg. List Price				
18	Hinge Plug (2)	157887	168064		See Num List				
19	Hinge Pin	149526	149526						
Key No.	Part Name	100,101,102,103 135,230,240,250	104,125,210 215,220,225		Sugg. List Price See Num List				
20	Spring, R.F. Body	149528	_____						
Key No.	Part Name	104,125 210,215	Sugg. List Price	220,225	100,101,102,103 135,230,240,250	Sugg. List Price			
21	Screw, V.F. Mounting (back)	172509	See Num List	204366	_____	See Num List			
22	Screw, V.F. Mounting (2) (front)	_____		204763	_____				
Key No.	Part Name	100,102 240,250	Sugg. List Price	101	Sugg. List Price	103,104,210 220,230	Sugg. List Price	125,135 215,225	Sugg. List Price
23	Neck Strap Assy. (includes key no's 24 thru 27)	163016	See Num List	161150	See Num List	161135	See Num List	163260	See Num List
Key No.	Part Name	100,102,125,135 215,225,240,250	101,103,104 210,220,230		Sugg. List Price				
24	Keeper	157821	168185		See Num List				
25	Tension Slide	157824	168188						
Key No.	Part Name	100,101,102,125 135,215,250	103,104,210,220 225,230,240		Sugg. List Price See Num List				
26	Neck Strap Band	160573	181136						
Key No.	Part Name	103,104,210 220,230	125,135 215,225	100,101,102 240,250	Sugg. List Price See Num List				
27	Rivet, Outside Prong (2)	178046	181251	_____					

VIEWFINDER ASSEMBLY

(Models 104, 125, 210 & 215)

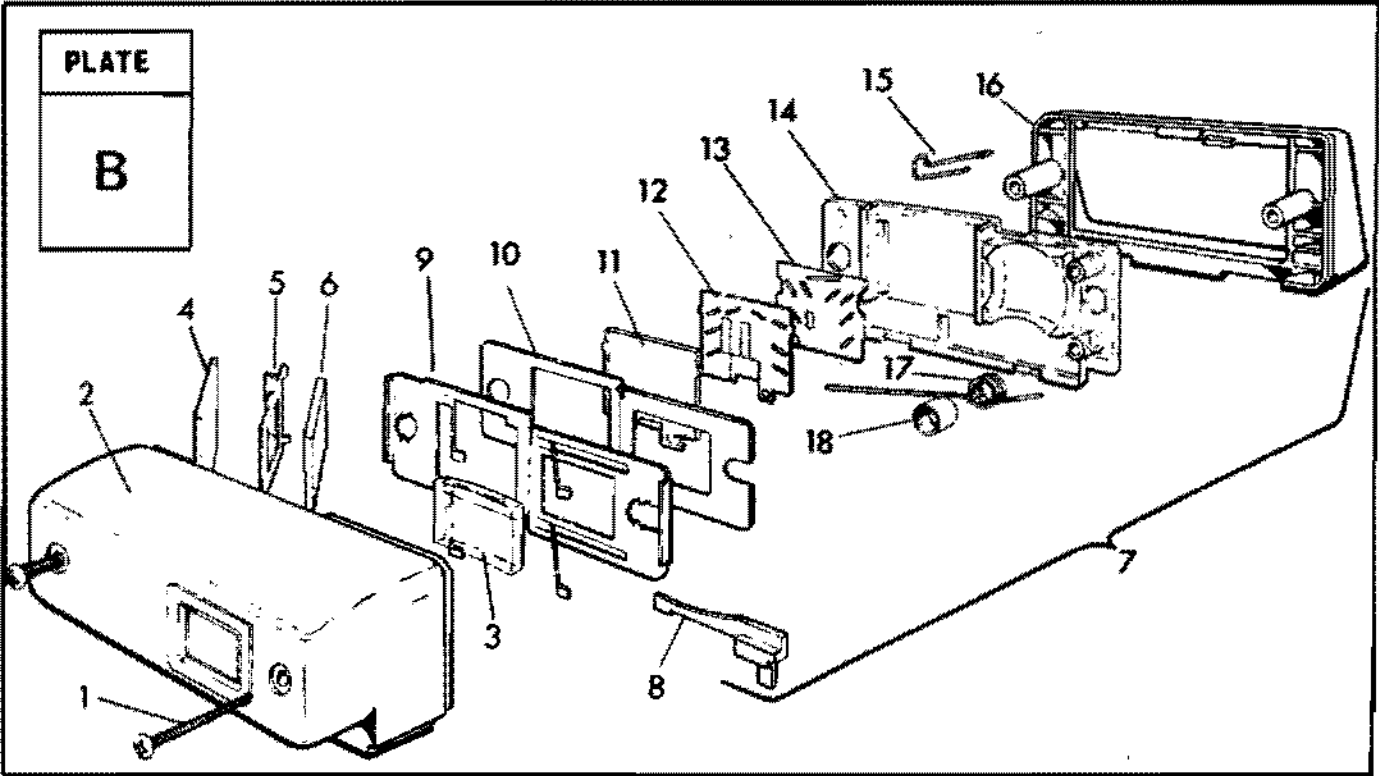


PARTS LIST B

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	104,125,210,215	Sugg. List Price
	Viewfinder Assy. (complete)	172811	See Num List
	Viewfinder Assy. (complete) Metric used on Models 104 & 210	172887	
1	Viewfinder Assy. Screw (2)	172528	
2	Viewfinder Rear Assy.	155486	
3	Positive Lens	163213	
4	Metal Mirror	172637	
5	Mirror Mask	172531	
6	Dichroic Mirror	172620	
7	Viewfinder Front Assy.	155485	
	Viewfinder Front Assy. (metric) used on Models 104 & 210	163327	
8	Cam	155492	
9	Mirror Retaining Spring	163314	
10	Baffle Plate	172713	
11	Light Pipe	155494	
12	Moving Mask	178343	
13	Fixed Mask	178302	
	Fixed Mask (metric) used on Models 104 & 210	181514	
14	Negative Lens	172810	
15	Adjusting Spring	181322	
16	Viewfinder Front Housing	172828	
17	Torsion Spring	161192	
18	Spacer	181254	

RANGEFINDER/VIEWFINDER ASSEMBLY

(Models 100, 101, 102, 103, 135, 220, 225, 230, 240 & 250)

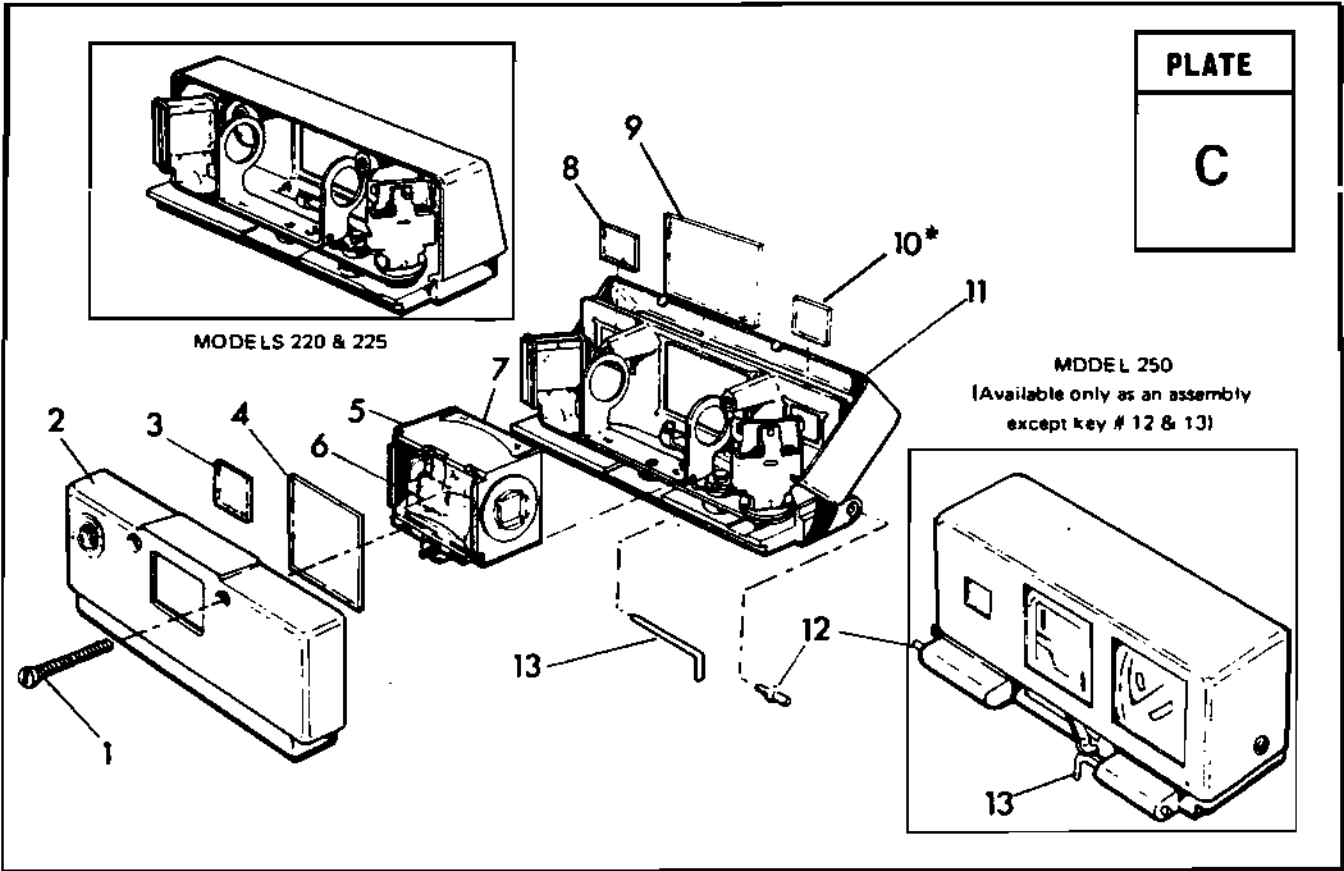


PARTS LIST C

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100,101 102	220	225	230	240	Sugg. List Price	103,135	250	Sugg. List Price
	R.F.-V.F. Assembly (complete)	221414	207907	221469	207060	221414		155558	181540	
1	Screw, Window Plate (2)	179708	179708	179708	179708	179708	See	179708	—	See
2	Rear Window Plate Assy.	155320	163118	163118	163118	155320	Num	163118	—	Num
3	R.F. Eye Window	149571	149571	149571	149571	149571	List	149571	—	List
4	V.F. Window	154556	154556	154556	154556	154556		154556	—	
5	V.F. Optics Assy. (acrylic)	204117	204117	204117	204117	204117		204117	—	
6	Lens, Positive (glass)	154068	154068	154068	154068	154068		154068	—	
7	Lens, Negative (glass)	154069	154069	154069	154069	154069		154069	—	
8	R.F. Window (small)	149533	—	—	149533	149533		149533	—	
9	V.F. Window	154556	—	—	154556	154556		154556	—	
*10	R.F. Window (large)	179730	—	—	179730	179730		179730	—	
11	R.F.-V.F. Band	149709	—	—	149709	149709		149709	—	
12	Hinge Pin (right)	149542	—	—	149542	149542		149542	149542	
13	Hinge Pin (left)	149543	—	—	149543	149543		149543	149543	

*On earlier 100 series cameras this window is the same size as key #8.
If this is the case, order window #149533 instead of window #179730.

REAR DOOR & REAR COVER ASSEMBLY

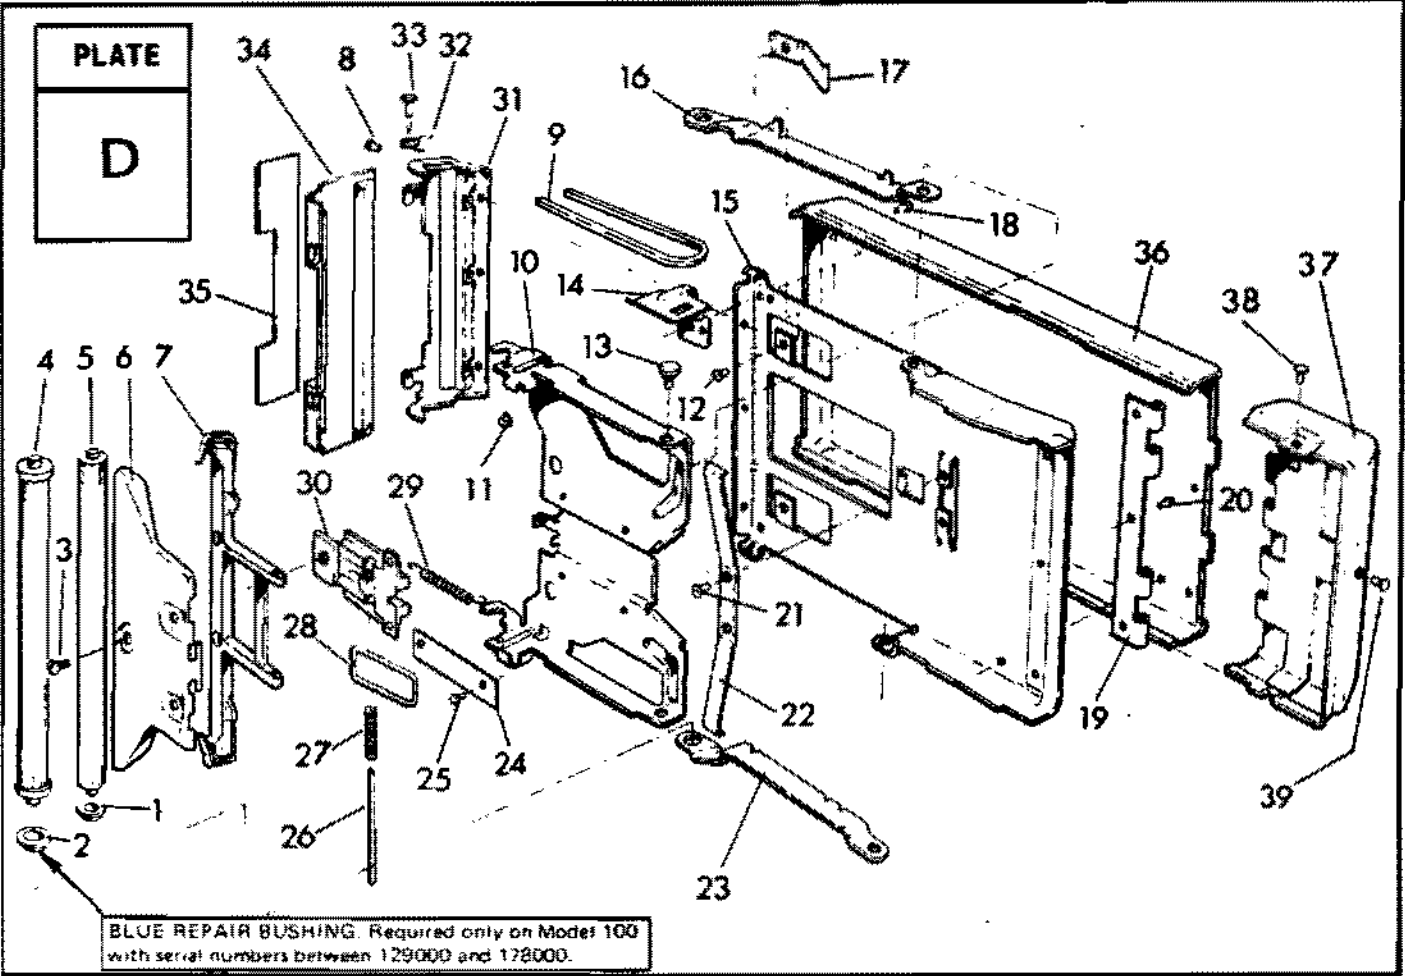

PARTS LIST D

PART NUMBER BY CAMERA MODEL


	Part Name	100,101,102 125,240,250	225	Sugg. List Price	103,104,135,210 215,220,230	Sugg. List Price
	Rear Door Assy.	146860	222403	See Num List	163120	See Num List

Key No.	Part Name	All Models	Sugg. List Price
1	Roll Bushing (4)	149517	See Num List
2	Repair Roll Bushing (2)	168072	
3	Screw, Slide Block (3)	157837	
4	Front Roll	149613	
5	Rear Roll	149612	
6	Slide Block Cover	163151	
7	Edge Control Bar Assy.	163154	
8	Rivet, Exit Cover Frame (3)	121741	
9	Spread Roll Spring (2)	155287	
10	Frame Roller Support	149755	
11	Latch Pin	160532	
12	Rivet, Roll Frame Spring (2)	76121	
13	Pivot, Spread Roll (2)	157809	
14	Roll Latch	161121	
15	Rear Door Spider	149766	
16	Front Roll Support (right)	155321	
17	Spring, Roll Frame (2)	157992	
18	Rivet, Rear Door (4)	157897	
19	Door Hinge	146688	
20	Rivet, Door Hinge (3)	121741	
21	Rivet, Door Spring (2)	121741	
22	Door Spring	157904	
23	Front Roll Support (left)	155322	
24	Slide Plate (2)	157842	
25	Rivet, Slide Plate (4)	121741	
26	Shaft	157838	
27	Locating Spring, Edge Control (2)	149574	
28	Link, Slide Block	157839	
29	Spring, Slide Block	157841	
30	Slide Block Assy.	155330	

Key No.	Part Name	100,101,102 240,250	Sugg. List Price	103,104,125,135 210,215,220,230	225	Sugg. List Price
31	Exit Cover Frame Assy.	155282	See Num List	163077	222354	See Num List
32	Pivot Spring, Exit Door	157894		157894	157894	
33	Pivot Stud, Exit Door (2)	157895		157895	157895	
34	Exit Door	157932		155438	222682	
35	Exit Cover Plate	146678				

Key No.	Part Name	100,101,102 225,240,250	Sugg. List Price	103,104,125 135,210,215	220,230	Sugg. List Price
36	Rear Door	220117	See Num List	168060	168060	See Num List
37	Rear Cover Assy.	155318		163117	204762	
38	Rivet, Rear Cover (top)	157830		157830	157830	
39	Rivet, Rear Cover (side)	157897		157897	157897	

BODY ASSEMBLY & BELLOWS

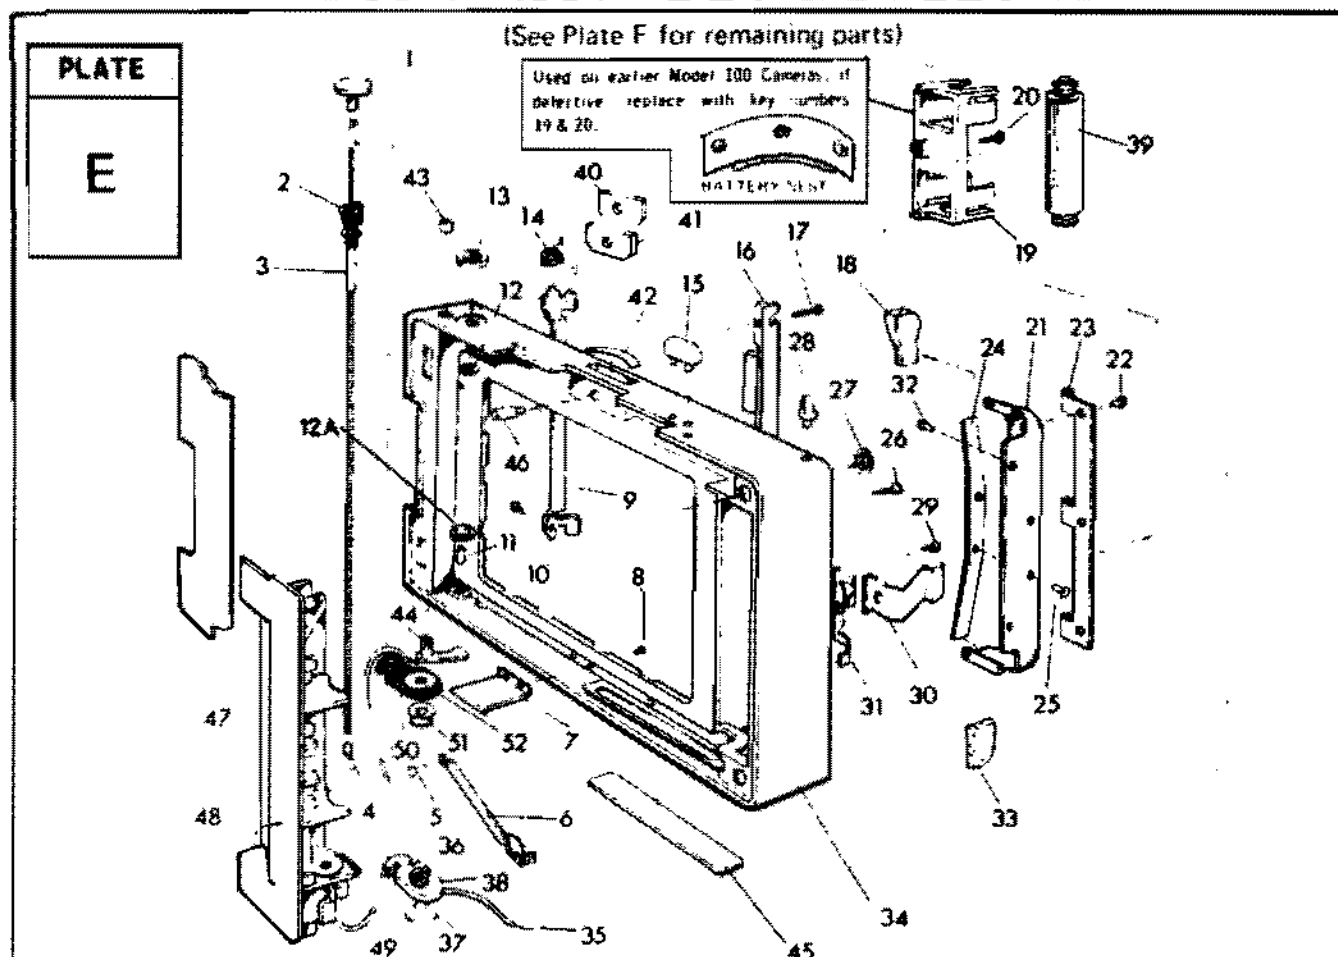

PARTS LIST E

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100,101 102	103 135	104 125	210 215	220	225	230	240	250	Sugg. List Price
	Body/Bellows Assy. (includes Key No's. 1 to 85, except Key No's. with asterisks)	155579	155555	172808	204516	204509	221466	204504	204501	188603	SEE NUM. LIST

Key No.	Part Name	100,101,102 240,250	Sugg. List Price	103,104,125,135,210 215,220,225,230	Sugg. List Price
*1	Shutter Release Knob	146689		146689	
*2	Return Spring	149551		149551	
3	Shutter Release Bushing Assy.	155117		155117	
*4	Shutter Release Tip	155106	SEE NUM. LIST	155106	SEE NUM. LIST
5	Rivet, Spring Contact	157877			
6	Battery Interlock Assy.	157918			
7	Spring, Mounting Plate	157923		157923	
8	Rivet, Mounting Plate (2)	121741		121741	
9	Release Latch	146674		146674	
10	Screw, Release Arm	121180		121180	
11	Pivot Pin, Outer Frame (bottom)	149553		168084	
12	Spacer, Outer Frame (top)	149554		149554	
12A	Spacer, Outer Frame (bottom)	153235		153235	
13	Bezel, Shutter Release	153234			
14	Spring, Release Latch	160416		160416	
15	R.F.V.F. Pivot Pad (2)	149710			

Key No.	Part Name	100,101,102 240,250	Sugg. List Price	103,104,125,135,210 215,220,225,230	Sugg. List Price
16	Tab Strip Bar	163085		—	
17	Screw, Tab Strip Bar (2)	160465		—	
18	Filler (left)	157915		157915	
*19	Battery Clip	155426	See Num List	—	See Num List
*20	Screw, Battery Clip	162914		—	
21	Light Seal Assy.	155118		161133	
22	Rivet, Stationary Hinge (3)	121741		121741	
23	Stationary Hinge	146687		155441	
24	Spring Stop	149520		161138	
25	Rivet, Spring Stop (2)	76121		—	
*26	Screw, Left-hand Guard (2)	—		168080	
*27	Fastener, Left-hand Guard (2)	162940		—	
28	Strap Lug (2)	157804		—	
*29	Screw, Rear Cover Latch	160591		—	
*30	Rear Cover Latch	146752		161137	
*31	Center Retainer	160431		—	
32	Rivet, Light Seal (4)	76175		—	
33	Filler (right)	157916		157916	
34	Body Assy. (without bellows & erecting system)	—	Special Order	—	Special Order

Key No.	Part Name	100,101,102,220 225,230,240,250	Sugg. List Price	103,104,125 135,210,215	Sugg. List Price
*35	Battery Term. Arm Assy. (Pos.)	X155116		X168063	
*36	Socket	155116	SEE NUM. LIST	168063	See Num List
*37	Eyelet	160409		160409	
*38	Terminal Arm	160406		160406	
		{ 4.5 Volt }		{ 3 Volt }	
*39	Battery	{ 155285 }		{ 163081 }	

Key No.	Part Name	100,101,102 103,135,230	Sugg. List Price	240,250	104,125,210 215,220,225	Sugg. List Price
40	Pole Piece (2)	149584	SEE NUM. LIST	188089	—	SEE NUM. LIST
41	Magnet	149870		188090	—	
42	Magnet Spring	160422		195194	—	


Key No.	Part Name	100,101,102 240,250	Sugg. List Price	225	103,104,125,135 210,215,220,230	Sugg. List Price
43	Latch Pivot	157899	SEE NUM. LIST	222687	172382	SEE NUM. LIST
44	Release Arm	149610		222683	163079	
*45	Slot Cover	149556		222686	168059	

Key No.	Part Name	100,101,102 103,135,230	240	Sugg. List Price See Num List	250	104,125,210 215,220,225	Sugg. List Price See Num List
46	Magnet Pivot	149547	204091		185640	—	

Key No.	Part Name	100,101 102,250	240	Sugg. List Price	103,104 125,135	210,215	Sugg. List Price	220,230	225	Sugg. List Price
47	Right-hand Guard	146750	195920	See Num List	163261	163261	See Num List	163261	222327	See Num List
*48	Left-hand Guard	—	—		155436	204397		178471	222688	
	Left-hand Guard Assy.	155316	204157		—	—		—	—	
*49	Battery Terminal Arm Assy. (Neg.)	157920	157920		X157920	X157920		X157920	X157920	
*50	Terminal Arm	160405	160405		160405	160405		160405	160405	
*51	Stud	155115	155115		168062	168062		155115	155115	
*52	Eyelet	160409	160409		179729	179729		160409	160409	

BODY ASSEMBLY & BELLOWS

(See Plate E for remaining parts)

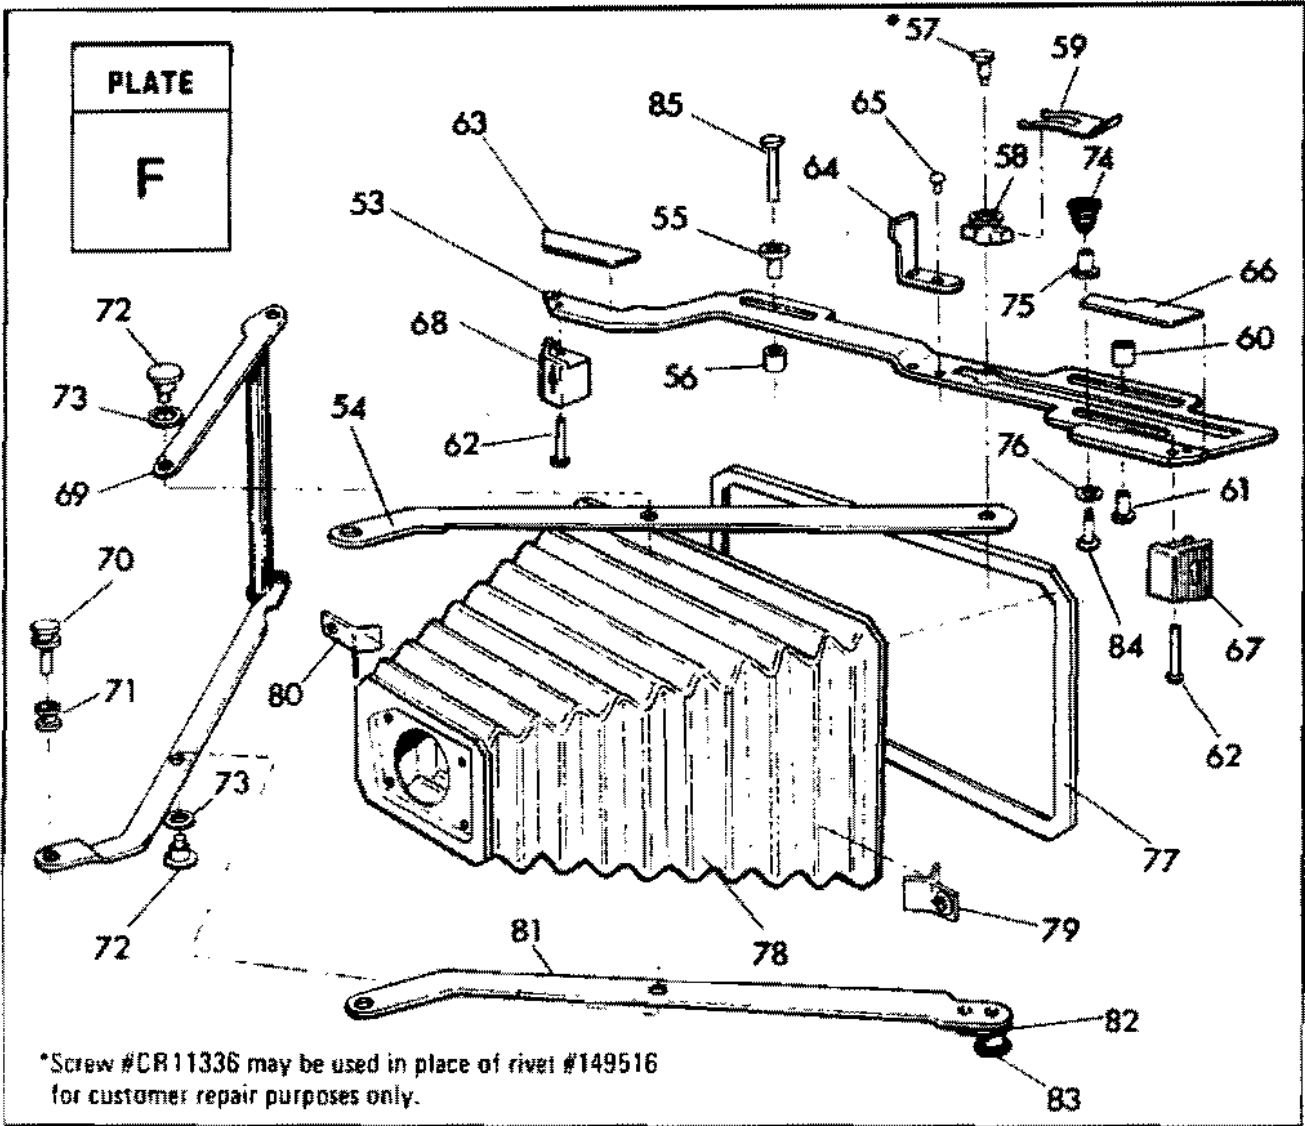

PARTS LIST F

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100,101 102	103 135	104 125	210 215	220	225	230	240	250	Sugg. List Price
	Body/Bellows Assembly cont'd. (includes Key No's. 1 to 85, except Key No's. with asterisks)	166579	204504	172808	204516	204509	221466	204504	204501	188603	See Num List

Key No.	Part Name	100,101 102	Sugg. List Price	103 135	220	225 230	240 250	Sugg. List Price	104 125	210 215	Sugg. List Price
53	Focus Bar Assembly (includes Key No's. 54 to 68)	146848	See Num List	163115	178300	172799	196372	See Num List	178361	204134	See Num List

Key No.	Part Name	All Models	Sugg. List Price
54	Inner Frame (top)	149567	See Num List
55	Sleeve, Focus Bar (right)	154561	
56	Washer, Focus Bar (right)	154558	
57	Rivet, Detent Slide	149516	
58	Detent Slide	149566	
59	Spring, Detent Slide	157869	
60	Sleeve, Focus Bar (left)	154563	
61	Bushing, Focus Bar (left)	155121	
62	Rivet, Focus Button (2)	157860	

Key No.	Part Name	100,101,102 240,250	103,135,220 225,230	104,125 210,215	Sugg. List Price
63	Zone Focus Plate	146684	146684	—	See Num List
64	Focus Bar Bracket	154559	178040	—	
65	Rivet, Focus Bar Bkt. (2)	82760	82760	—	
66	Focus Bar Plate	157919	157919	—	

Key No.	Part Name	100,101,102 103,104,125,135	210,215 220	225,230 240,250	Sugg. List Price
67	Focus Button (left)	149602	204395	196439	See Num List
68	Focus Button (right)	155212	204394	196438	


Key No.	Part Name	All Models	Sugg. List Price
69	'U' Frame Assembly	149545	See Num List
70	Rivet, Shutter Mount Spring	162912	
71	Bushing, Shutter Mount	157857	
72	Link Pivot (2)	149581	
73	Spacer, Link Pivot (2)	149552	
74	Brake Spring	155120	
75	Brake Sleeve	154560	
76	Brake Washer	154562	
77	Bellows Light Seal	179732	

Key No.	Part Name	100,101,102,103 104,125,135 220,230,240	Sugg. List Price	210,215 225,250	Sugg. List Price
78	Bellows Assy.	222100	See Num List	196378	See Num List
79	Flash Wire Tab Assy. (2)	157851		204010	
80	Cable Release Wire Tab	160463		204008	

Key No.	Part Name	100,101,102 240,250	Sugg. List Price	103,104,125,135 210,215,220 225,230	Sugg. List Price
81	Inner Frame Bottom Assy.	154575	See Num List	168057	See Num List
82	Track Guide	149550		168082	
83	Rivet, Track Guide	157876		168083	
84	Brake Rivet	154565		168068	
85	Rivet, Focus Bar (2)	154564		168069	

SHUTTER ASSEMBLY

(Models 100, 101, 102, 240 & 250)

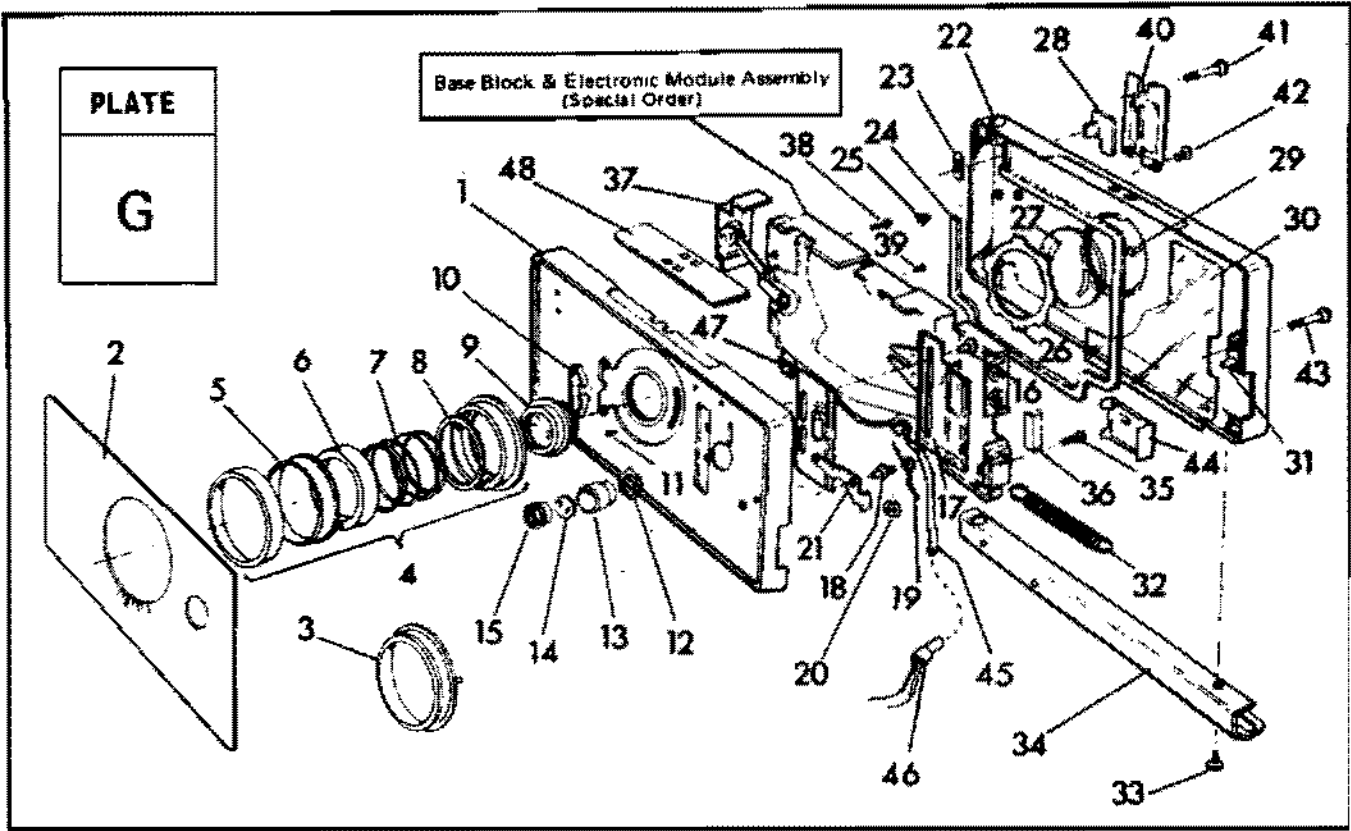

PARTS LIST G

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100	Sugg. List Price	101	Sugg. List Price	102	Sugg. List Price	240	Sugg. List Price	250	Sugg. List Price
1	Shutter Assembly-Complete (includes Base Block & Module)	153307	See Num List	155598	See Num List	172806	See Num List	204502	See Num List	198774	See Num List
	Shutter Front Casting Assy. (includes Key No's 2 thru 21)	153308		172800		172807		204503		188609	
2	Etch Plate, Front Casting	146711		161171		161179		204230		188375	

Key No.	Part Name	100,101 102	Sugg. List Price	240,250	Sugg. List Price
3	Bezel Sub-Assembly	204408	See Num List	—	See Num List
4	Bezel Assy. (complete)	—		204354	
5	Center Ring	149809		149809	
6	Outer Ring	149810		204407	
7	Bezel Spring	149813		149813	
8	Spring Seat	149811		—	
9	Front Lens Assy.	155235		155235	

Key No.	Part Name	100,101 102	Sugg. List Price	240,250	Sugg. List Price
10	Bezel Friction Spring	152525	See Num List	152525	See Num List
11	Screw, Bezel Retaining (3)	149812			
12	Wave Washer	155179		155179	
13	Cell Lens Mount	154856		154856	
14	Cell Lens	154071		154071	
15	Cell Lens Retainer	154857		154857	
16	Rivet, Cell Wedge (2)	149838		149838	
17	Cell Wedge	220796		220796	
18	Pivot Pin, Actuating Arm	149829		149829	
19	Spring, Actuating Arm	149831		149831	
20	Retaining Ring	155161		155161	
21	Flash Filter Act. Arm Assy.	153311		153311	

Key No.	Part Name	100,240 250	Sugg. List Price	101,102	Sugg. List Price
22	Shutter Rear Casting Assy. (includes Key No's 23 thru 34)	153310	See Num List	155586	See Num List
23	Release Block Retainer	152521		152521	
24	Shutter Gasket	155331		155331	
25	Retainer, Rel. Cover Screw (2)			172398	
26	Rear Lens Retainer/Mtg. Plate	154046		161160	
27	Lens, Rear Positive	155242		155242	
28	Shutter Release Block	146722		146722	
29	Rivet, Rear Lens Mtg. Plate (3)			172313	
30	Elec. Mtg. Board Insulator	157939			
31	Dowel Pin (2)	149821			
32	Shutter Mount Spring	172320		172320	
33	Screw, Shutter Mount	149538		172501	
34	Shutter Mount/Erecting Bkt.	52403		161162	
35	Screw, Module Mounting (2)	149817		149817	
36	Circuit Light Seal	160568		160568	
37	Front Casting Light Seal	163301		163301	
38	Screw, Base Block Mtg. (Models 100,101 & 102 have 2)	149865		149865	
39	Screw, Base Block Mtg. (short)	157866		157866	
40	Cable Release Cover	149740		163173	
41	Screw, Shutter Fstg. (long)	149822		149822	
42	Screw, Release Cover (2)	154870		172500	
43	Screw, Shutter Fastening (2)	149828		149828	
44	Cap Stop Bracket	155376		155376	


Key No.	Part Name	100,101 102,240	Sugg. List Price	250	Sugg. List Price
*45	Battery Wire Assy.	155250	See Num List	204007	See Num List
46	Banding Clip	130501		130501	

Key No.	Part Name	100	101,102	Sugg. List Price	240,250	Sugg. List Price
47	Scene Selector Button	154076	170992	See Num List	196248	See Num List
48	Top Etch Plate	157940	170991		196034	

*Do not unsolder the battery wire on models with teflon printed circuits. An additional charge will be made for damaged circuits.

SHUTTER ASSEMBLY

(Models 103, 104, 125, 135, 210, 215, 220, 225 & 230)

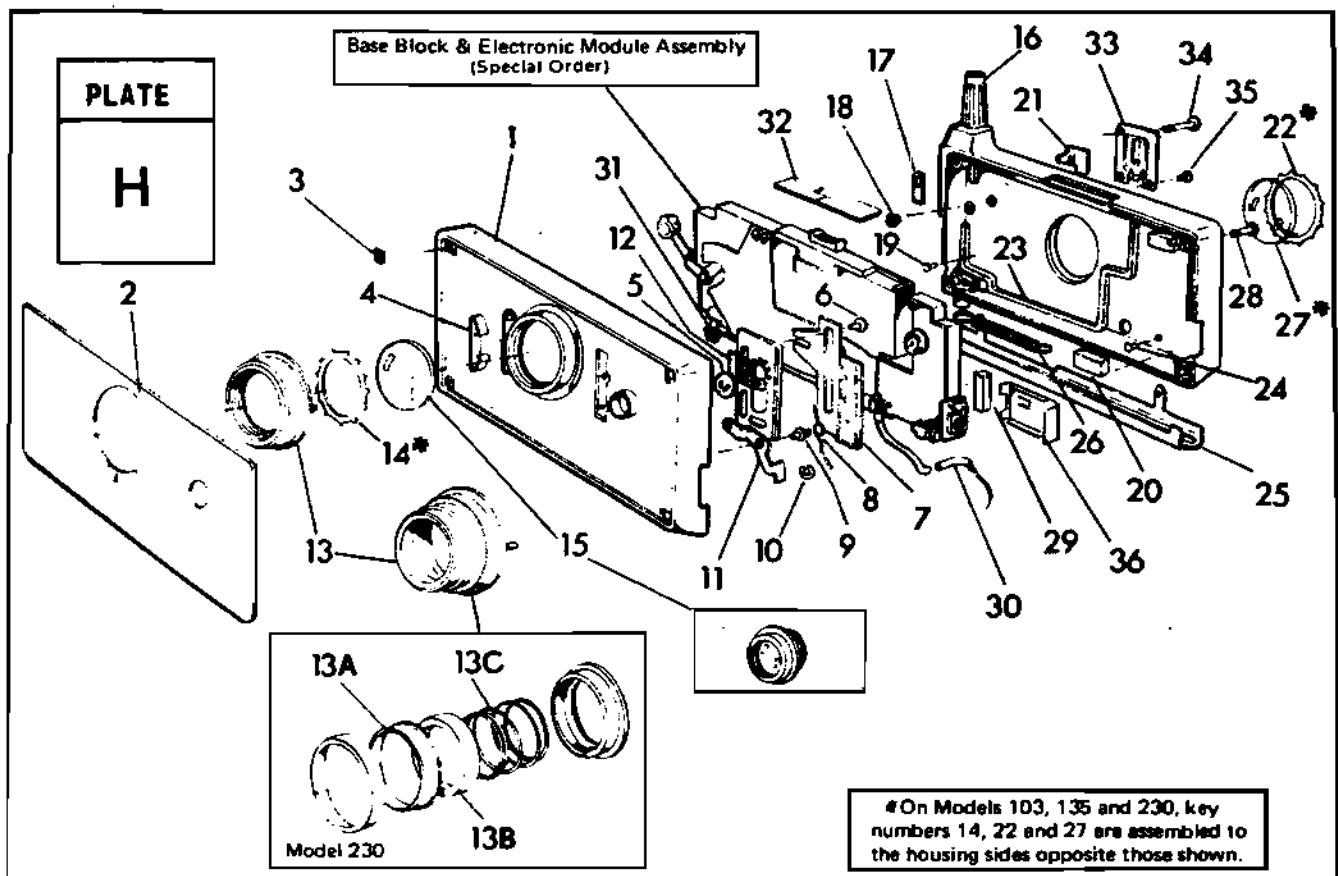

PARTS LIST H

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	103	104	125	135	210	215	220	225	230	Sugg. List Price
1	Shutter Assy. Complete (incl. Base Block & Module)	155554	172852	172858	178590	204517	196769	204512	221468	204505	See Num List
	Shutter Front Housing Assy. (incl. Key No's. 2 thru 15)	155552	172813	172857	178589	204520	204194	204514	221472	204506	
2	Front Etch Plate	161130	161185	163259	188352	204233	163253	204232	222073	204231	

Key No.	Part Name	103,104,125,135,210,215,220,225,230	Sugg. List Price
3	Housing Nut (4)	168091	See Num List
4	Bezel Friction Spring	152525	
5	Cell Lens	154071	
6	Rivet, Cell Wedge	149838	
7	Cell Wedge	220796	
8	Spring, Actuating Arm	178081	
9	Pivot Pin, Actuating Arm	149829	
10	Retaining Ring	155161	
11	Flash Filter Act. Arm Assy	153311	

Key No.	Part Name	220,225	103,104,125,135 210,215,230	Sugg. List Price
12	Filter (used with Polaroid Plastic Lenses)	220958	—	See Num List

Key No.	Part Name	103,135	104,125,210 215,220,225	Sugg. List Price	230	Sugg. List Price
13	Bezel	163126	163198			
	Bezel Assy. (complete)	_____	_____		204408	
13A	Center Ring	_____	_____		149809	
13B	Outer Ring	_____	_____		149810	
13C	Bezel Spring	_____	_____		149813	

Key No.	Part Name	104,125	210,215 220,225	Sugg. List Price	103,135 230	Sugg. List Price
14	Front Lens Retainer	172623	172623		163069	
15	Front Lens	172616	172616		_____	
			* Or 204403			
—	Lens Assy.	_____	_____		155235	

Key No.	Part Name	103 135	104 125	210 215	220	225	230	Sugg. List Price
16	Shutter Rear Housing Assy. (includes Key No's. 17 thru 27)	155551	196768	196768	204515	221473	188605	See Num. List

Key No.	Part Name	103,135 230	Sugg. List Price	104,125,210 215,220,225	Sugg. List Price
17	Release Block Retainer	152521		152521	
18	Retainer, Release Cover Screw (2)	172398		172398	
19	Rivet, Rear Lens Mtg. Plate (3)	172313		_____	
20	Retainer, Electronic Block (2) (Models 220,225 & 230 have 1)	178043		178043	
21	Shutter Release Block	146722		146722	
22	Rear Lens Retainer/Mtg. Plate	161160		172623	


Key No.	Part Name	103,104,125 135,210,215	Sugg. List Price	220,225	230	Sugg. List Price
23	Shutter Gasket	163116		155331	155331	
24	Rivet, Shutter Mount (2)	168049		198844	198844	
25	Shutter Mount	163193		204108	222452	
26	Shutter Mount Spring	172381		172381	172381	

Key No.	Part Name	104,125	210,215 220,225	Sugg. List Price	103,135 230	Sugg. List Price
27	Lens, Rear Positive	172616	172616		211469	
			* Or 204402			

Key No.	Part Name	103,104 125,135	210,215	Sugg. L.P.	220,230	225	Sugg. List Price
28	Screw, Shutter Fastening (3) (Models 220,225 & 230 have 2)	168048	168048		168048	168048	
29	Circuit Light Seal	_____	_____		160568	160568	
30	Battery Wire Assy.	163076	204398		204434	222694	
31	Scene Selector Button	_____	_____		196248	196248	
32	Slider Decorative Plate	163068	196033		196034	196034	
33	Cable Release Cover	163114	163114		163114	222684	
34	Screw, Shutter Fstg. (long)	168047	168047		168047	168047	
35	Screw, Release Cover (2)	172500	172500		172500	172500	
36	Cap Stop Bracket	155376	155376		155376	155376	

*#172616 is manufactured by American Optical and cannot be intermixed with Polaroid lenses #204402 and #204403.

FRONT COVER ASSEMBLY

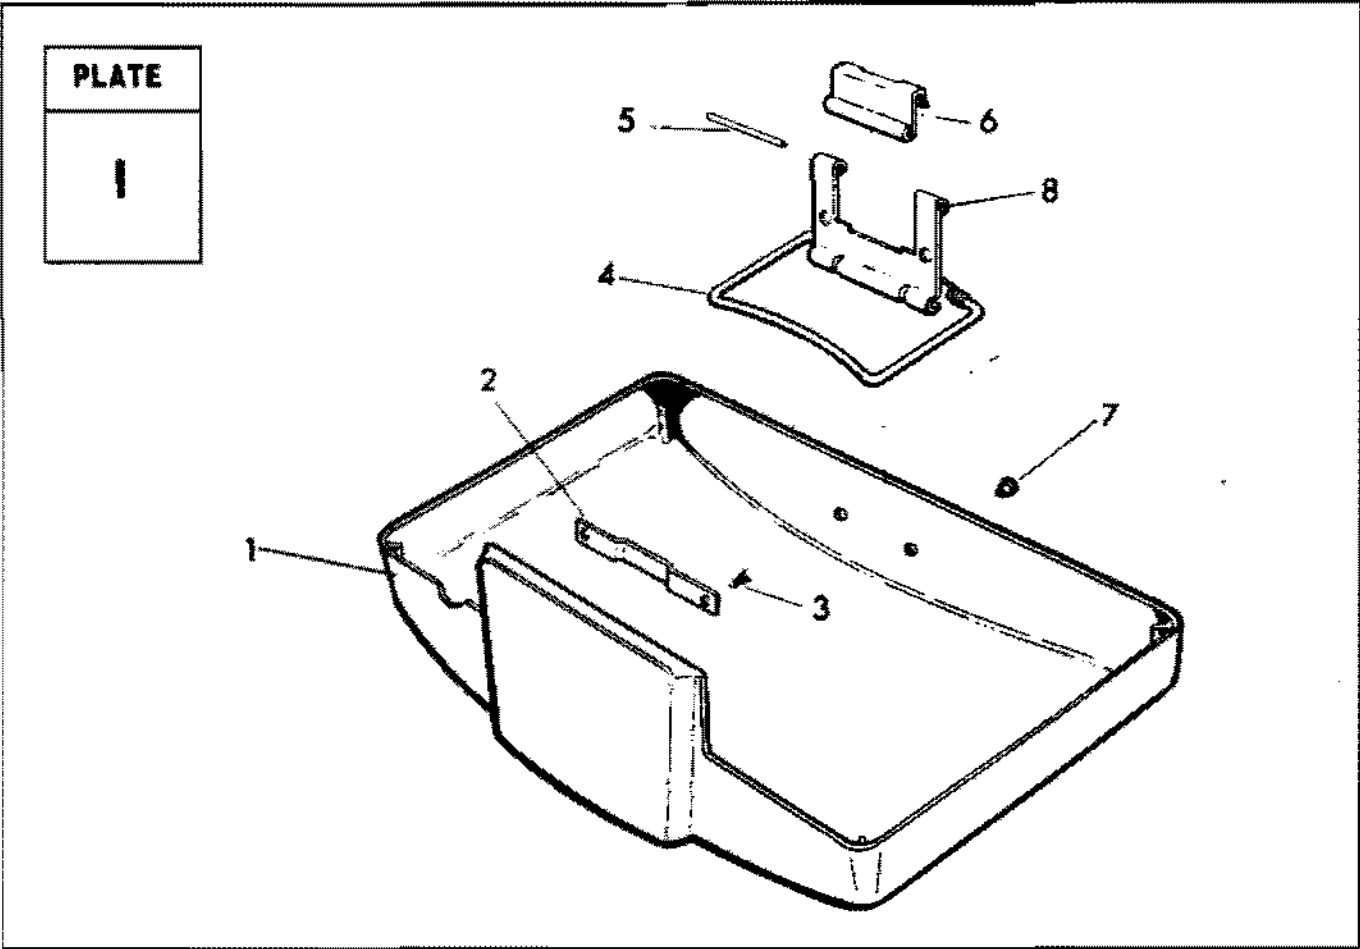

PARTS LIST I

FRONT COVER ASSY. (100 SERIES)

PART NUMBER BY CAMERA MODEL

Key No.	Part Name	100	101	102	103	104	125	135	Sugg. List Price
1	Front Cover Assembly	149762	155470	155479	163082	172619	181358	191096	
2	Latch Plate	160439	160439	160439	160439	—	—	160439	
3	Screw, Latch Plate (2)	160550	160550	160550	160550	—	—	160550	
4	Clip Spring Assy.	160549	160549	160549	160549	160549	160549	181271	
5	Mtg. Plate Hinge Pin	160450	160450	160450	160450	160450	160450	160450	
6	Mtg. Clip Hinge	157933	157933	157933	157933	157933	157933	157933	
7	Rivet, Mtg. Plate Hinge (2)	160449	160449	160449	160449	160449	160449	160449	
8	Mtg. Plate Hinge	157934	157934	157934	157934	157934	157934	157934	

FRONT COVER ASSY. (200 SERIES)

Key No.	Part Name	210	215	220	225	230	240	250	Sugg. List Price
1	Front Cover Assembly	204436	204406	204435	222367	204433	196574	163313	
2	Latch Plate	—	—	—	—	160439	160439	160439	
3	Screw, Latch Plate (2)	—	—	—	—	160550	160550	160550	
4	Clip Spring Assy.	181271	181271	181271	181271	181271	160549	160549	
5	Mtg. Plate Hinge Pin	160450	160450	160450	160450	160450	160450	160450	
6	Mtg. Clip Hinge	157933	157933	157933	157933	157933	157933	157933	
7	Rivet, Mtg. Plate Hinge (2)	160449	160449	160449	160449	160449	160449	160449	
8	Mtg. Plate Hinge	157934	157934	157934	157934	157934	157934	157934	

NUMERICAL PARTS LIST

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
76121	Rivet	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
76175	Rivet	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
82760	Rivet	X	X	X	X			X			X	X	X	X	X	.04
121180	Screw, Release Arm	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
121741	Rivet	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
130501	Banding Clip	X	X	X										X	X	.04
132498	Shutter Mount	X												X	X	.66
146674	Release Latch	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.39
146678	Exit Cover Plate	X	X	X										X	X	.22
146684	Zone Focus Plate	X	X	X	X			X			X	X	X	X	X	.09
146687	Stationary Hinge	X	X	X										X	X	.26
146688	Door Hinge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.26
146689	Shutter Release Knob	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.44
146711	Etch Plate, Front Casting	X														.61
146722	Shutter Release Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
146750	Right-Hand Guard	X	X	X											X	.18
146752	Rear Cover Latch	X	X	X										X	X	.09
146848	FOCUS BAR ASSEMBLY	X	X	X												3.14
146860	REAR DOOR ASSEMBLY	X	X	X			X							X	X	13.42
149516	Rivet, Detent Slide	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149517	Roll Bushing	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149520	Spring Stop	X	X	X										X	X	.04
149526	Hinge Pin	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149528	R. F. Body Spring	X	X	X	X			X					X	X	X	.09
149533	R. F. Window (Small)	X	X	X	X			X					X	X		.09
149538	Screw, Shutter Mount	X												X	X	.04
149542	R. F. /V. F. Hinge Pin (Right)	X	X	X	X			X					X	X	X	.04
149543	R. F. /V. F. Hinge Pin (Left)	X	X	X	X			X					X	X	X	.04
149545	"U" FRAME ASSEMBLY	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.79
149547	Magnet Pivot	X	X	X	X			X					X			.04
149550	Track Guide	X	X	X										X	X	.04
149551	Return Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149552	Link Pivot Spacer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149553	Pivot Pin, Outer Frame (Bottom)	X	X	X										X	X	.04
149554	Spacer, Outer Frame (Top)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149556	Slot Cover	X	X	X										X	X	.13
149566	Detent Slide	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149567	Inner Frame (Top)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.31

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
149570	Screw, Shutter Shaft	X	X	X										X	X	.09
149571	Rangefinder Eye Window	X	X	X	X			X			X	X	X	X		.13
149574	Locating Spring, Edge Control	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149581	Link Pivot	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
149584	Pole Piece	X	X	X	X			X					X			.09
149602	Focus Button (Left)	X	X	X	X	X	X	X								.18
149610	Rel. Arm	X	X	X										X	X	.18
149612	Rear Roll	X	X	X	X	X	X	X	X	X	X	X	X	X	X	1.00
149613	Front Roll	X	X	X	X	X	X	X	X	X	X	X	X	X	X	1.36
149709	R. F. -V. F. Band	X	X	X	X			X					X	X		.53
149710	R. F. -V. F. Pivot Pad	X	X	X										X	X	.09
149740	Cable Release Cover	X												X	X	.13
149755	Frame Roller Support	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.61
149762	FRONT COVER ASSEMBLY	X														3.06
149766	Rear Door Spider	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.79
149809	Center Ring	X	X	X									X	X	X	.13
149810	Outer Ring	X	X	X									X			.39
149811	Spring Seat	X	X	X												.09
149812	Screw, Bezel Retaining	X	X	X												.04
149813	Bezel Spring	X	X	X									X	X	X	.13
149817	Mounting Screw, Module	X	X	X										X	X	.04
149821	Dowel Pin	X												X	X	.04
149822	Screw, Shutter Fstg. (Long)	X	X	X										X	X	.04
149828	Screw, Shutter Fastening	X	X	X										X	X	.04
149829	Pivot Pin, Actuating Arm	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149831	Actuating Arm Spring	X	X	X										X	X	.04
149838	Rivet, Cell Wedge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
149865	Screw, Base Block Mtg.	X	X	X										X	X	.04
149870	Magnet	X	X	X	X			X					X			.13
152521	Release Block Retainer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
152525	Bezel Friction Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
153234	Bezel, Shutter Release	X	X	X										X	X	.18
153235	Spacer, Outer Frame (Bottom)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
153307	SHUTTER ASSEMBLY	X														54.21
153308	SHUTTER FRONT CASTING ASSEMBLY	X														15.01
153310	SHUTTER REAR CASTING ASSEMBLY	X												X	X	8.05
153311	FLASH FILTER ACTUATOR ARM ASSEMBLY	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.22
154046	Rear Lens Retainer	X												X	X	.09
154068	Lens, Positive	X	X	X	X			X			X	X	X	X		2.40
154069	Lens, Negative	X	X	X	X			X			X	X	X	X		2.40

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
154071	Cell Lens	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.13
154076	Scene Selector Button	X														.18
154556	Viewfinder Window	X	X	X	X			X			X	X	X	X		.13
154558	Washer, Focus Bar (Right)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
154559	Focus Bar Bracket	X	X	X										X	X	.04
154560	Brake Sleeve	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
154561	Sleeve, Focus Bar (Right)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
154562	Brake Washer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
154563	Sleeve, Focus Bar (Left)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
154564	Rivet, Focus Bar	X	X	X										X	X	.04
154565	Brake Rivet	X	X	X										X	X	.09
154575	INNER FRAME BOTTOM ASSY.	X	X	X										X	X	.31
154856	Cell Lens Mount	X	X	X										X	X	.09
154857	Cell Lens Retainer	X	X	X										X	X	.22
154870	Screw, Release Cover	X												X	X	.04
155106	Shutter Release Tip	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
155115	Stud	X	X	X							X	X	X	X	X	.04
155116	Socket	X	X	X							X	X	X	X	X	.04
X155116	BATTERY TERM. ARM ASSY. (POS.)	X	X	X							X	X	X	X	X	.31
155117	SHUTTER RELEASE BUSHING ASSEMBLY	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.31
155118	LIGHT SEAL ASSEMBLY	X	X	X										X	X	.83
155120	Brake Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
155121	Bushing, Focus Bar (Left)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
155161	Retaining Ring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
155179	Wave Washer	X	X	X										X	X	.04
155212	Focus Button (Right)	X	X	X	X	X	X	X								.35
155235	FRONT LENS ASSEMBLY	X	X	X	X			X					X	X	X	6.83
155242	Lens, Rear Positive	X	X	X	X			X					X	X	X	2.18
155250	BATTERY WIRE ASSEMBLY	X	X	X										X		.57
155282	EXIT COVER FRAME ASSY.	X	X	X										X	X	2.14
155285	Battery, (4.5 Volt)	X	X	X							X	X	X	X	X	1.50
155287	Spread Roll Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.22
155316	LEFT HAND GUARD ASS'Y	X	X	X											X	.74
155317	BASE MOULDING ASS'Y	X						X					X	X		2.62
155318	REAR COVER ASSEMBLY	X	X	X								X		X	X	1.53
155320	REAR WINDOW PLATE ASSY.	X	X	X										X		.87
155321	Front Roll Support (Right)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.13
155322	Front Roll Support (Left)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.13
155330	SLIDE BLOCK ASSEMBLY	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.26

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
155331	Shutter Gasket	X	X	X							X	X	X	X	X	.09
155376	Cap Stop Bracket	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
155426	Battery Clip	X	X	X										X	X	.13
155436	Left-Hand Guard				X	X	X	X								.31
155438	Exit Door				X	X	X	X	X	X			X			.22
155441	Stationary Hinge				X	X	X	X	X	X	X	X	X			.74
155470	FRONT COVER ASSEMBLY		X													3.06
155479	FRONT COVER ASSEMBLY			X												3.76
155485	VIEWFINDER FRONT ASSY.					X	X		X	X						2.18
155486	V.F. Rear Housing					X	X		X	X						.79
155492	Cam					X	X		X	X						.09
155494	Light Pipe					X	X		X	X						.22
155503	REAR DOOR SPIDER ASSY.	X	X											X	X	8.66
155551	SHUTTER REAR HOUSING ASSY.				X			X								5.82
155552	SHUTTER FRONT HOUSING ASSY.				X											10.94
155554	SHUTTER ASSEMBLY				X											43.36
155558	RF/VF ASSEMBLY				X			X								15.31
155579	BODY ASSEMBLY/BELLOWS	X	X	X												25.16
155586	SHUTTER REAR CASTING ASS'Y		X	X												4.94
155598	SHUTTER ASSEMBLY		X													54.21
157804	Strap Lug	X	X	X										X	X	.22
157809	Pivot, Spread Roll	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157821	Keeper	X		X			X	X		X		X		X	X	.04
157824	Tension Slide	X		X			X	X		X		X		X	X	.04
157830	Rivet, Rear Cover	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157837	Screw, Slide Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157838	Shaft	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157839	Link, Slide Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157841	Spring, Slide Block	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
157842	Slide Plate	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
157851	FLASH WIRE TAB ASSY.	X	X	X	X	X	X	X			X		X	X		.04
157857	Bushing, Shutter Mount	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157860	Rivet, Focus Button	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157866	Screw, Base Block Mtg. (Short)	X	X	X										X	X	.04
157869	Spring, Detent Slide	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157876	Rivet, Track Guide	X	X	X										X	X	.04
157877	Rivet, Spring Contact	X	X	X										X	X	.04
157887	Hinge Plug	X	X	X								X		X	X	.04
157894	Pivot Spring, Exit Door	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
157895	Pivot Stud, Exit Door	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157897	Rivet	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157899	Latch Pivot	X	X	X										X	X	.04
157904	Door Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157915	Filler, Left	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157916	Filler, Right	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157918	BATTERY INTERLOCK ASSY.	X	X	X										X	X	.31
157919	Focus Bar Plate	X	X	X	X			X			X	X	X	X	X	.04
X157920	BATTERY TERM. ARM ASSY. (NEG.)				X	X	X	X	X	X	X	X	X			.31
157920	BATTERY TERM. ARM ASSY. (NEG.)	X	X	X										X	X	.31
157923	Spring, Mounting Plate	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.31
157932	EXIT DOOR ASSEMBLY	X	X	X										X	X	.70
157933	Mounting Clip Hinge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.22
157934	Mounting Plate Hinge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.22
157939	Electronic Mounting Board Insulator	X												X	X	.04
157940	Top Etch Plate	X														.74
157949	Detent	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
157992	Spring, Roll Frame	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160405	Battery Term. Arm (Neg.)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160406	Battery Term. Arm (Pos.)	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160409	Eyelet	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160416	Spring, Release Latch	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160422	Magnet Spring	X	X	X	X			X					X			.04
160431	Center Retainer	X	X	X										X	X	.04
160439	Latch Plate	X	X	X	X			X					X	X	X	.04
160440	Flat Washer	X	X	X										X	X	.04
160442	Bowed Washer	X	X	X										X	X	.04
160449	Rivet, Mtg. Plate Hinge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160450	Mounting Plate Hinge Pin	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160455	"D" Ring	X	X	X										X	X	.04
160460	Spring Washer	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160463	Cable Release Wire Tab	X	X	X	X	X	X			X			X	X		.04
160465	Screw, Tab Strip Bar	X	X	X										X	X	.04
160473	Detent Stud	X	X	X										X	X	.04
160532	Latch Pin	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
160549	CLIP SPRING ASSEMBLY	X	X	X	X	X	X							X	X	.31
160550	Screw, Latch Plate	X	X	X	X			X					X	X	X	.04
160568	Circuit Light Seal	X	X	X						X	X	X	X	X	X	.04
160573	Neck Strap Band	X	X	X			X	X	X						X	.04
160591	Screw, Rear Cover Latch	X	X	X										X	X	.04

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
161121	Roll Latch	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.26
161130	Front Etch Plate				X											.39
161133	LIGHT SEAL ASSEMBLY				X	X	X	X	X	X	X	X	X			1.00
161135	NECK STRAP ASSEMBLY				X	X			X		X		X			.53
161137	Rear Cover Latch				X	X	X	X	X	X	X	X	X			.04
161138	Spring Stop				X	X	X	X	X	X	X	X	X			.13
161150	NECK STRAP ASSEMBLY		X													.70
161160	Rear Lens Mounting Plate		X	X	X			X					X			.13
161162	Erecting Bracket		X	X												.35
161171	Etch Plate, Front Casting		X													.44
161179	Etch Plate, Front Casting			X												.61
161185	Front Etch Plate					X										.39
161192	Torsion Spring					X	X		X	X						.04
162912	Rivet, Shutter Mount Spring	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.04
162914	Screw, Battery Clip	X	X	X										X	X	.04
162940	Fastener, Left-Hand Guard	X	X	X										X	X	.04
163016	NECK STRAP ASSEMBLY	X		X										X	X	1.88
163068	Slider Decorative Plate				X	X	X	X								.09
163069	Front Lens Retainer				X		X						X			.04
163076	BATTERY WIRE ASSEMBLY				X	X	X	X								.57
163077	EXIT COVER FRAME ASSY.				X	X	X	X	X	X	X		X			1.66
163079	Rel. Arm				X	X	X	X	X	X	X		X			.09
163081	Battery (3 Volt)				X	X	X	X	X	X						1.25
163082	FRONT COVER ASSEMBLY				X											3.06
163085	Tab Strip Bar	X	X	X										X	X	.26
163114	Cable Release Cover				X	X	X	X	X	X	X		X			.09
163115	FOCUS BAR ASSEMBLY				X			X								2.49
163116	Shutter Gasket				X	X	X	X	X	X						.09
163117	REAR COVER ASSEMBLY				X	X	X	X	X	X						1.62
163118	REAR WINDOW PLATE ASSY.				X			X			X	X	X			.70
163120	REAR DOOR ASSEMBLY				X	X		X	X	X	X		X			12.47
163126	Bezel				X			X								.18
163151	Slide Block Cover	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.31
163154	EDGE CONTROL BAR ASSY.	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.79
163173	Cable Release Cover		X	X												.09
163193	Shutter Mount				X	X	X	X	X	X						.48
163198	Bezel					X	X		X	X	X	X				.13
163213	Positive Lens					X	X		X	X						.22
163253	Front Etch Plate									X						.53

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
163259	Front Etch Plate						X									.48
163260	NECK STRAP ASSEMBLY						X X			X		X				1.84
163261	Right-Hand Guard				X	X	X X	X	X	X	X		X			.13
163301	Front Casting Light Seal	X	X	X										X	X	.04
163313	FRONT COVER ASSEMBLY														X	2.49
163314	Mirror Retaining Spring						X X		X X							.18
163327	V.F. FRONT ASSY. (METRIC)					X			X							2.27
168047	Screw, Shutter Fstg. (Long)				X	X	X	X	X	X	X	X	X			.04
168048	Screw, Shutter Fastening				X	X	X	X	X	X	X	X	X			.04
168049	Rivet, Shutter Mount				X	X	X	X	X	X						.04
168055	Screw, Shutter Mount				X	X	X	X	X	X	X	X	X			.04
168056	Detent Stud				X	X	X	X	X	X	X	X	X			.09
168057	INNER FRAME BOTTOM ASSY.				X	X	X	X	X	X	X	X	X			.31
168059	Slot Cover				X	X	X	X	X	X	X		X			.18
168060	Rear Door				X	X	X	X	X	X	X		X			1.40
168062	Stud				X	X	X	X	X	X						.04
X168063	BATTERY TERM. ARM ASSY. (POS.)				X	X	X	X	X	X						.31
168063	Socket				X	X	X	X	X	X						.04
168064	Hinge Plug				X	X	X	X	X	X	X		X			.04
168068	Brake Rivet				X	X	X	X	X	X	X	X	X			.04
168069	Rivet, Focus Bar				X	X	X	X	X	X	X	X	X			.04
168072	Repair Roll Bushing	X														.18
168080	Screw, Left-Hand Guard				X	X	X	X	X	X	X	X	X			.04
168082	Track Guide				X	X	X	X	X	X	X	X	X			.04
168083	Rivet, Track Guide				X	X	X	X	X	X	X	X	X			.04
168084	Pivot Pin, Outer Frame (Bottom)				X	X	X	X	X	X	X	X	X			.04
168091	Housing Nut				X	X	X	X	X	X	X	X	X			.04
168098	Shutter Shaft	X	X	X										X	X	.35
168099	Shutter Shaft Sleeve	X	X	X										X	X	.22
168185	Keeper, Neck Strap		X		X	X			X		X		X			.04
168188	Tension Slide		X		X	X			X		X		X			.04
170991	Top Etch Plate		X	X												.74
170992	Scene Selector Button		X	X												.35
172313	Rivet, Mtg. Plate		X	X	X			X					X			.04
172320	Shutter Mount Spring	X	X	X										X	X	.13
172331	Fastener, Bellows		X	X	X	X	X	X	X	X	X	X	X			.04
172381	Shutter Mount Spring				X	X	X	X	X	X	X	X	X			.13
172382	Latch Pivot				X	X	X	X	X	X	X		X			.04
172398	Retainer, Release Cover Screw	X	X	X	X	X	X	X	X	X	X	X	X			.04
172500	Screw, Release Cover	X	X	X	X	X	X	X	X	X	X	X	X			.04

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
172501	Screw, Shutter Mount	X	X													.04
172509	Screw, V. F. Mtg. (Back)				X	X		X	X							.04
172528	V. F. Screw				X	X		X	X							.04
172531	Mirror Mask				X	X		X	X							.04
172616	Lens				X	X		X	X	X	X					.35
172619	FRONT COVER ASSEMBLY				X											2.84
172620	Dichroic Mirror				X	X		X	X							.70
172623	Lens Retainer				X	X		X	X	X	X					.04
172637	Metal Mirror				X	X		X	X							.22
172713	Baffle Plate				X	X		X	X							.04
172799	FOCUS BAR ASSEMBLY											X	X			2.14
172800	SHUTTER FRONT CASTING ASSEMBLY	X														14.66
172806	SHUTTER ASSEMBLY		X													54.21
172807	SHUTTER FRONT CASTING ASSEMBLY		X													16.41
172808	BODY ASSEMBLY/BELLOWS				X	X										14.83
172810	Negative Lens				X	X		X	X							.48
172811	VIEWFINDER ASS'Y				X	X		X	X							4.94
172813	SHUTTER FRONT HOUSING ASS'Y				X											3.76
172828	Viewfinder Front Housing				X	X		X	X							.31
172852	SHUTTER ASSEMBLY				X											32.55
172857	SHUTTER FRONT HOUSING ASSEMBLY					X										4.11
172858	SHUTTER ASSEMBLY					X										32.55
172887	V. F. ASSEMBLY (METRIC)				X			X								4.99
178040	Focus Bar Bracket			X				X			X	X	X			.04
178043	Retainer, Elect. Block				X	X	X	X	X	X	X	X	X			.04
178046	Rivet, Outside Prong				X	X			X		X		X			.04
178081	Spring, Actuating Arm				X	X	X	X	X	X	X	X	X			.04
178300	FOCUS BAR ASSEMBLY										X					2.14
178302	Fixed Mask				X	X		X	X							.13
178343	Moving Mask				X	X		X	X							.13
178361	FOCUS BAR ASSEMBLY				X	X										2.06
178471	Left-Hand Guard										X		X			.31
178589	SHUTTER FRONT CASTING ASSEMBLY						X									10.98
178590	SHUTTER ASSEMBLY						X									43.36
179708	Screw, Window Plate	X	X	X	X			X			X	X	X	X		.04
179729	Eyelet				X	X	X	X	X	X						.04
179730	R. F. Window (Large)	X	X	X	X			X					X	X		.09
179731	Bellows Front Frame Light Seal	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
179732	Bellows Light Seal	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.09
181136	Neck Strap Band				X	X			X		X	X	X	X		.04
181251	Rivet, Outside Prong						X	X		X		X				.04
181254	Spacer					X	X		X	X						.04
181271	CLIP SPRING ASSEMBLY							X	X	X	X	X	X			.31
181322	Adjusting Spring					X	X		X	X						.18
181358	FRONT COVER ASSEMBLY						X									3.06
181514	Fixed Mask (Metric)					X			X							.13
181540	R. F. -V. F. ASSEMBLY														X	23.28
185640	Magnet Pivot														X	.35
188089	Pole Piece													X	X	.09
188090	Magnet													X	X	.13
188352	Front Etch Plate							X								.48
188375	Etch Plate, Front Casting													X		.39
188603	BODY ASSEMBLY/BELLOWS													X		24.68
188605	SHUTTER REAR CASTING ASSEMBLY												X			5.12
188609	SHUTTER FRONT CASTING ASSEMBLY														X	15.09
191096	FRONT COVER ASSEMBLY							X								3.06
195194	Magnet Spring													X	X	.04
195920	Right-Hand Guard													X		.26
196033	Slider Decorative Plate								X	X						.04
196034	Top Etch Plate										X	X	X	X	X	.26
196248	Scene Selector Button										X	X	X	X	X	.13
196372	FOCUS BAR ASSEMBLY													X	X	2.14
196378	BELLOWS ASSEMBLY								X	X		X			X	3.89
196438	Focus Button (Right)											X	X	X	X	.22
196439	Focus Button (Left)											X	X	X	X	.13
196574	FRONT COVER ASSEMBLY													X		2.71
196768	SHUTTER REAR CASTING ASSEMBLY						X	X	X	X						2.76
196769	SHUTTER ASSEMBLY									X						32.55
198774	SHUTTER ASSEMBLY														X	62.34
198844	Rivet, Shutter Mount										X	X	X			.04
204007	BATTERY WIRE ASSEMBLY														X	.44
204008	Cable Release Wire Tab								X	X		X			X	.04
204010	FLASH WIRE TAB ASSY.								X	X		X			X	.04
204091	Magnet Pivot														X	.09
204108	Shutter Mount										X	X				.44
204117	V. F. OPTICS ASSEMBLY	X	X	X	X			X			X	X	X	X		3.02
204134	FOCUS BAR ASSEMBLY								X	X						1.75
204157	LEFT-HAND GUARD ASSY.													X		.74

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
204194	SHUTTER FRONT HOUSING ASSEMBLY									X						4.11
204230	Etch Plate, Front Casting													X		.48
204231	Front Etch Plate												X			.48
204232	Front Etch Plate										X					.48
204233	Front Etch Plate								X							.48
204354	BEZEL ASSEMBLY													X	X	1.53
204366	Screw, V. F. Mtg. (Back)										X	X				.04
204394	Focus Button (Right)								X	X	X					.22
204395	Focus Button (Left)								X	X	X					.13
204397	Left-Hand Guard								X	X						.39
204398	BATTERY WIRE ASSY.								X	X						.53
204402	Lens, Rear Positive								X	X	X	X				.26
204403	Front Lens								X	X	X	X				.26
204406	FRONT COVER ASSEMBLY									X						2.06
204407	Outer Ring													X	X	.54
204408	BEZEL ASSEMBLY	X	X	X									X			1.31
204433	FRONT COVER ASSEMBLY												X			2.40
204434	BATTERY WIRE ASSEMBLY										X		X			.44
204435	FRONT COVER ASSEMBLY										X					2.32
204436	FRONT COVER ASSEMBLY								X							2.06
204501	BODY ASSEMBLY/BELLOWS													X		24.81
204502	SHUTTER ASSEMBLY													X		54.21
204503	SHUTTER FRONT CASTING ASSEMBLY													X		15.16
204504	BODY ASSEMBLY/BELLOWS													X		14.71
204505	SHUTTER ASSEMBLY													X		
204506	SHUTTER FRONT CASTING ASSEMBLY													X		11.33
204509	BODY ASSEMBLY/BELLOWS										X					16.12
204512	SHUTTER ASSEMBLY										X					43.36
204514	SHUTTER FRONT CASTING ASSEMBLY										X					3.34
204515	SHUTTER REAR CASTING ASSEMBLY										X					2.80
204516	BODY ASSEMBLY/BELLOWS								X	X						12.98
204517	SHUTTER ASSEMBLY								X							32.55
204520	SHUTTER FRONT CASTING ASSEMBLY								X							3.24
204762	REAR COVER ASSEMBLY										X		X			1.62
204763	Screw, V. F. Mtg. (Front)										X	X				.04
207060	R. F. -V. F. ASSEMBLY													X		9.41
207907	R. F. -V. F. ASSEMBLY										X					8.79
211469	Lens, Rear Positive				X			X					X			2.18
220117	Rear Door	X	X	X									X		X	1.72
220796	Cell Wedge	X	X	X	X	X	X	X	X	X	X	X	X	X	X	.13

PART NO.	PART NAME	100	101	102	103	104	125	135	210	215	220	225	230	240	250	SUGG. LIST PRICE
220958	Filter										X	X				.04
220968	Screw, Bellows	X												X	X	.04
221414	R. F. -V. F. ASSEMBLY													X		9.60
221466	BODY ASSEMBLY/BELLOWS	X	X	X								X				15.48
221468	SHUTTER ASSEMBLY											X				32.55
221469	R. F. -V. F. ASSEMBLY											X				9.10
221472	SHUTTER FRONT CASTING ASSEMBLY											X				3.72
221473	SHUTTER REAR CASTING ASSEMBLY											X				2.76
222073	Front Etch Plate											X				.44
222100	BELLOWS ASSEMBLY	X	X	X	X	X	X	X		X		X	X	X		3.89
222327	Right-Hand Guard											X				.18
222354	EXIT COVER FRAME ASSY.											X				1.66
222367	FRONT COVER ASSEMBLY											X				2.22
222403	REAR DOOR ASSEMBLY											X				12.80
222452	Shutter Mount												X			.53
222682	Exit Door											X				.22
222683	Release Arm											X				.09
222684	Cable Release Cover											X				.09
222686	Slot Cover											X				.13
222687	Latch Pivot											X				.04
222688	Left-Hand Guard											X				.44
222694	BATTERY WIRE ASSEMBLY											X				.44
252403	Shutter Mount	X												X	X	.70

